


FLEX+ Bollard




Installation Instructions




Components

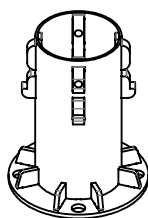


FLX-COR
Base Core

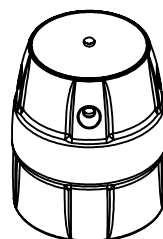


FLX-C-B
PolyCore Base
and Hardware

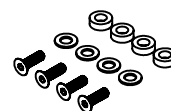

FLX-C-CAP
Cap, Post Washers
and Hardware

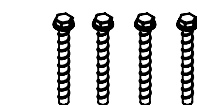


HW-C-A12-5 OR
HW-C-M12-130
Concrete Anchors

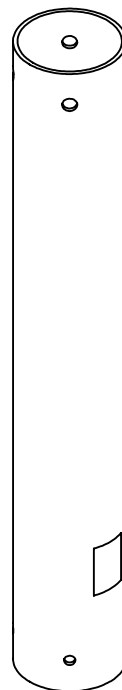

FBL-C-P
Post


Required Tools

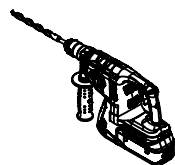

Hammer Drill With
Ø 12mm [1/2in] Masonry Bit




Impact
Driver

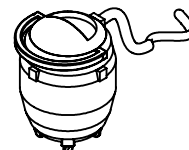

Vacuum



Marker

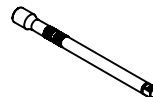

Extender



Hex Socket
17mm [3/4in]



Hex Bit
8mm [5/16in]



McCue Corporation
Danvers, Massachusetts, USA
+1(800) 800 8503
cservices@mccue.com


McCue UK
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com

McCue Asia
Xiamen, Fujian, China
+8 592 2200790
rchen@mccue.com





McCue Europe
Magirus-Deutz-Straße 14
89077 Ulm, Germany
+49 731 40 38 82 68
eusales@mccue.com

mccue.com



Step 1

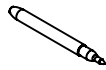


Marker

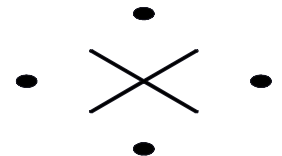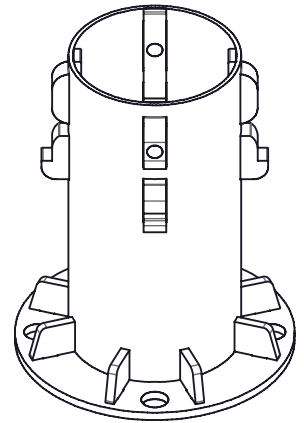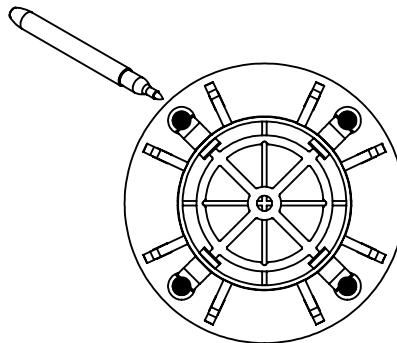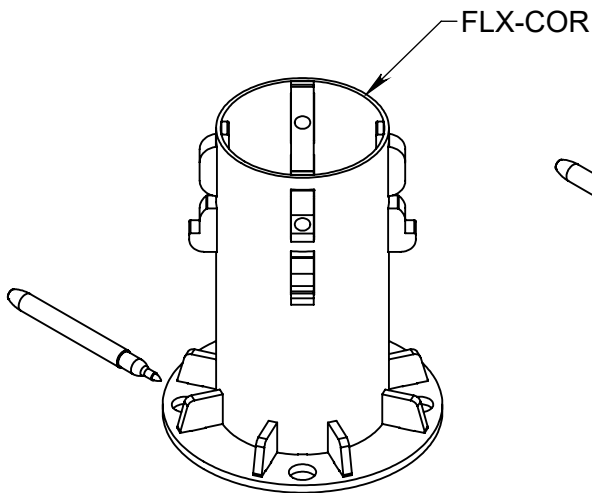

Step 2

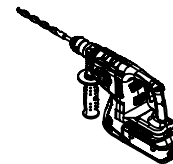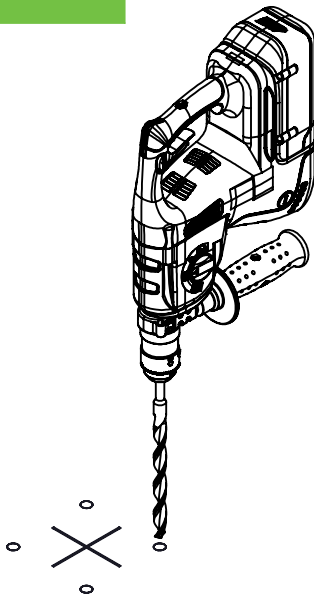


Hammer Drill With
Ø 12mm or 1/2in Masonry Bit

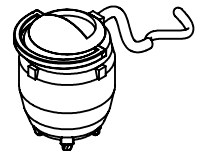


Vacuum


HW-C-A1250
IMPERIAL
ANCHOR DETAIL

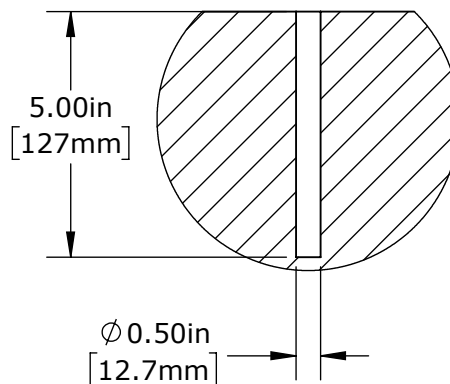


HW-C-AM12-130
METRIC
ANCHOR DETAIL

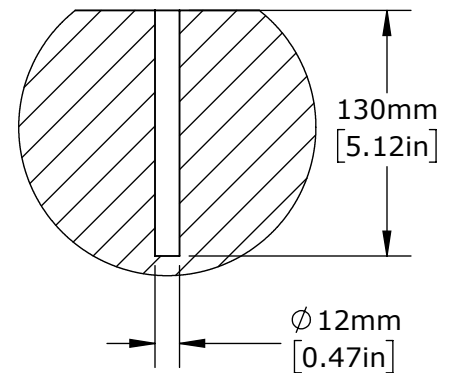

Step 3

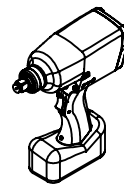


Impact Driver

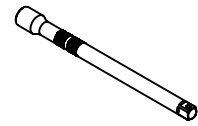

Extender




17mm [3/4in]
Hex Socket

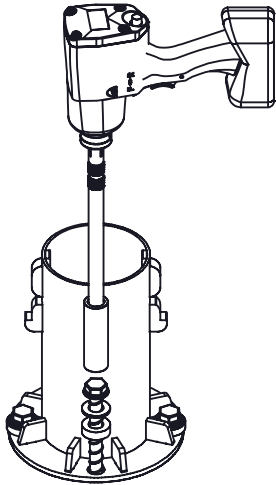

HW-C-A1250 or
HW-C-AM12-130



HW-WSH-ANC

HW-DPR


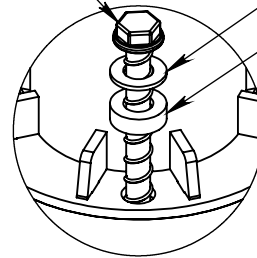


ANCHOR DETAIL



Step 4

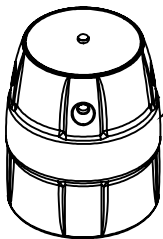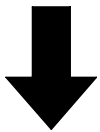


FLX-C-B

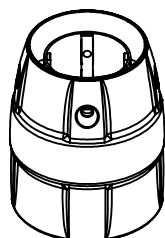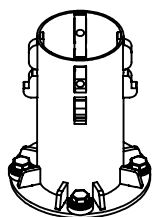

Step 5

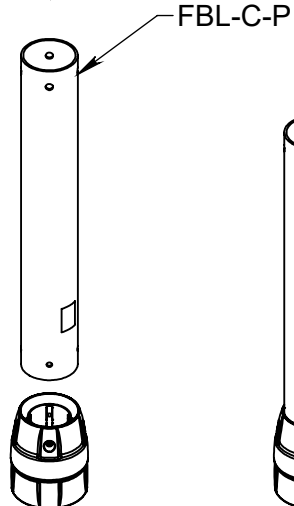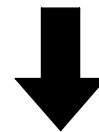

FBL-C-P

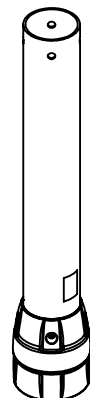



Step 6







Impact
Driver



Hex Bit
8mm [5/16in]

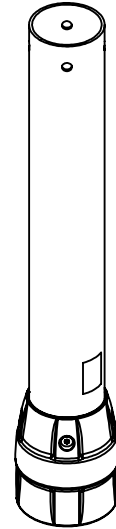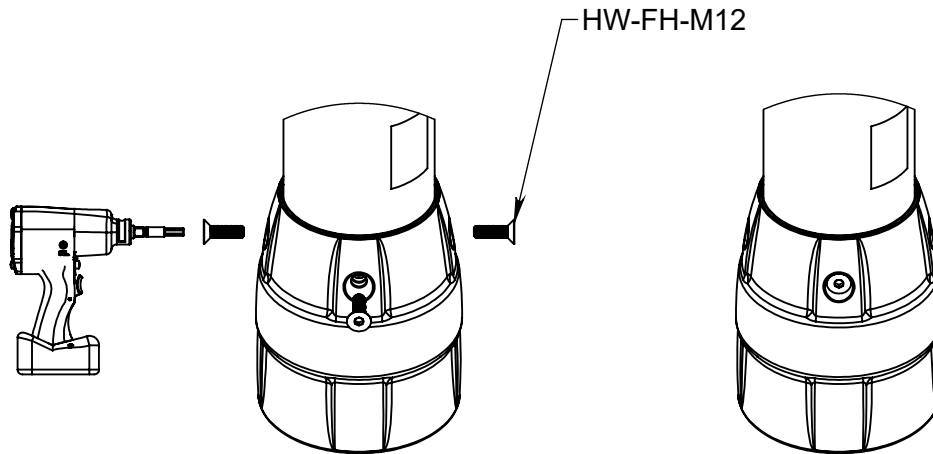

Step 7

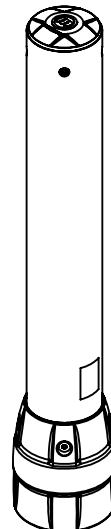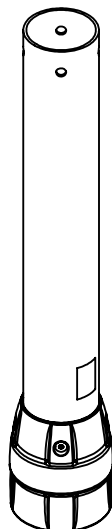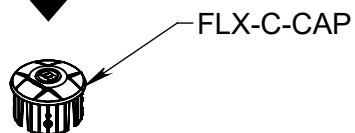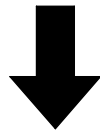


Step 8



Impact
Driver



Hex Bit
8mm [5/16in]

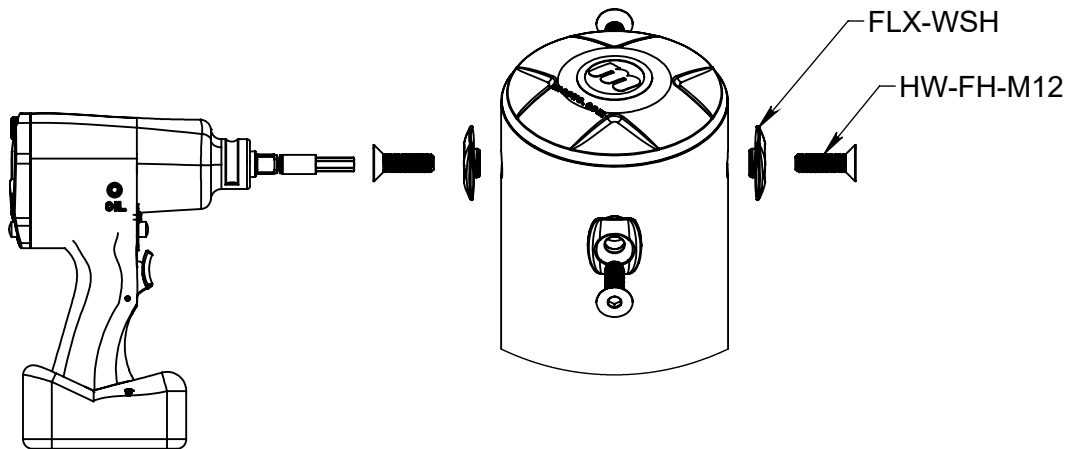

Installation Complete

