
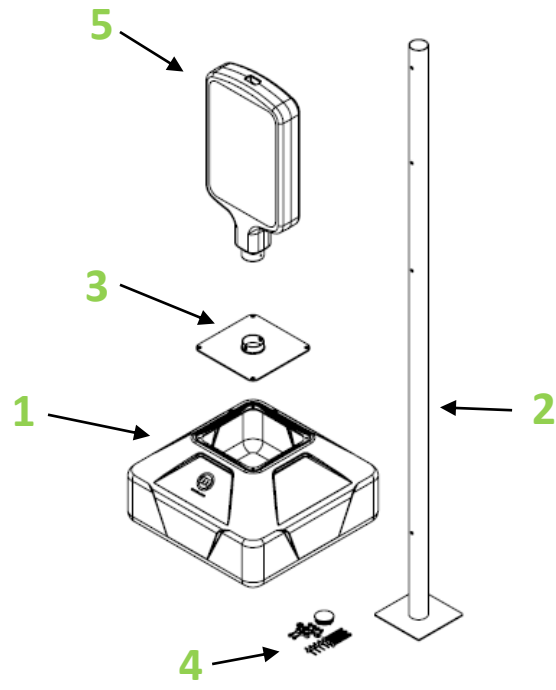


BUMPER SIGN MOBILE

BSM-###


INSTALLATION INSTRUCTIONS

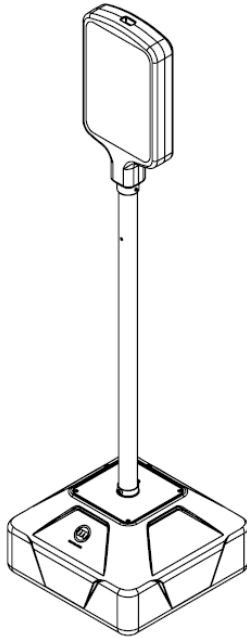

Components

Note : Not all hardware components provided will be used.


ITEM #	PART #	DESCRIPTION	QTY
1	BSM-BASE-###	BUMPERSIGN MOBILE POUR IN SIGN BASE	1
2	BSM-POST	BUMPERSIGN MOBILE POST	1
3	BSM-CAP-###	BUMPERSIGN MOBILE CAP	1
4	BSM-HARDWARE	BUMPERSIGN MOBILE HARDWARE KIT	1
5	15AB060-###	BS TOP MOLDED SHELL	1

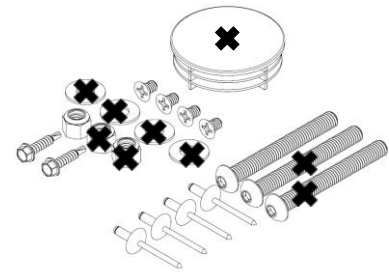

Tools Required



Drill with
#11 Drill Bit
3/8" Drill Bit



NUT DRIVER
WITH 5/16" BIT



SCREWDRIVER



RIVET GUN



SOCKET WRENCH
WITH 9/16" SOCKET



7/32" ALLEN KEY



McCue Corporation
Peabody, Massachusetts, USA
+1 (800) 800 8503
customer-care@mccue.com


McCue UK & Europe
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com

McCue Asia
迈客(厦门)有限公司
Xiamen, Fujian, China
+86-592-2200790

mccue.com




1

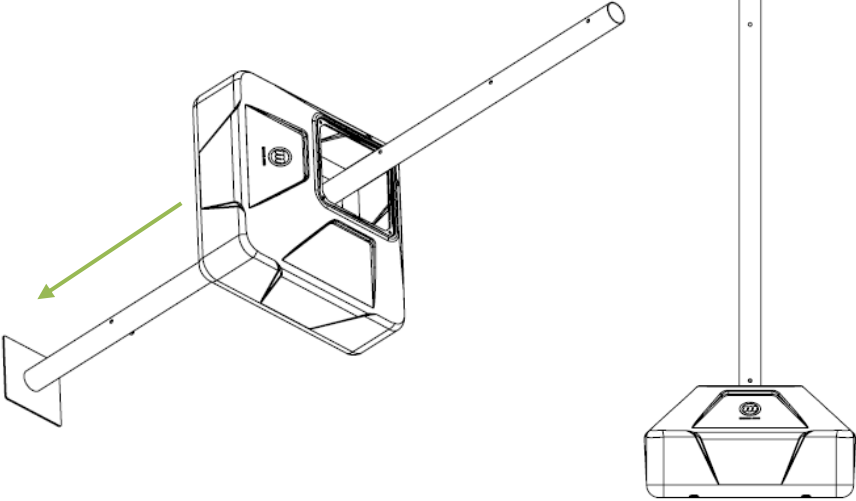

- Slide base over post



2

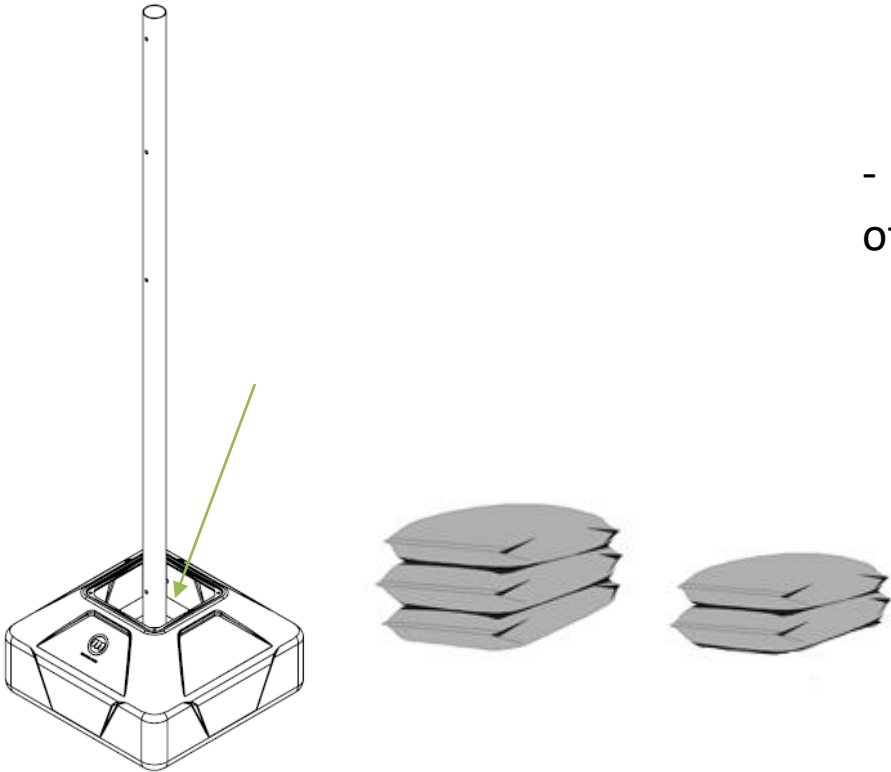

- Fill base with 250LBs
of crushed Stone


3

- Slide cover over post and into place

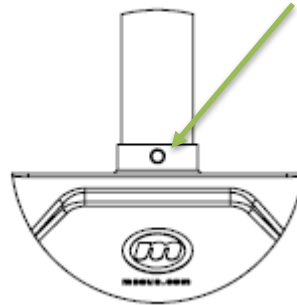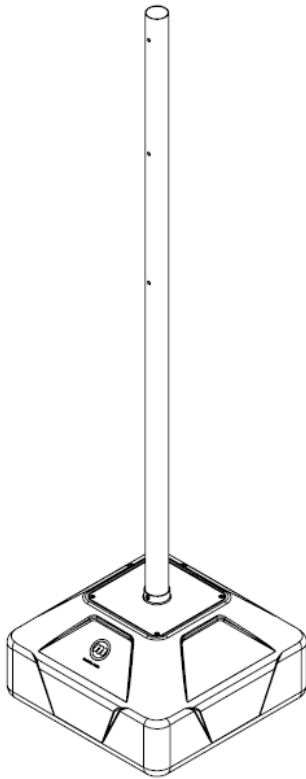


4

- Secure the cover to the base with 4 flat head screws

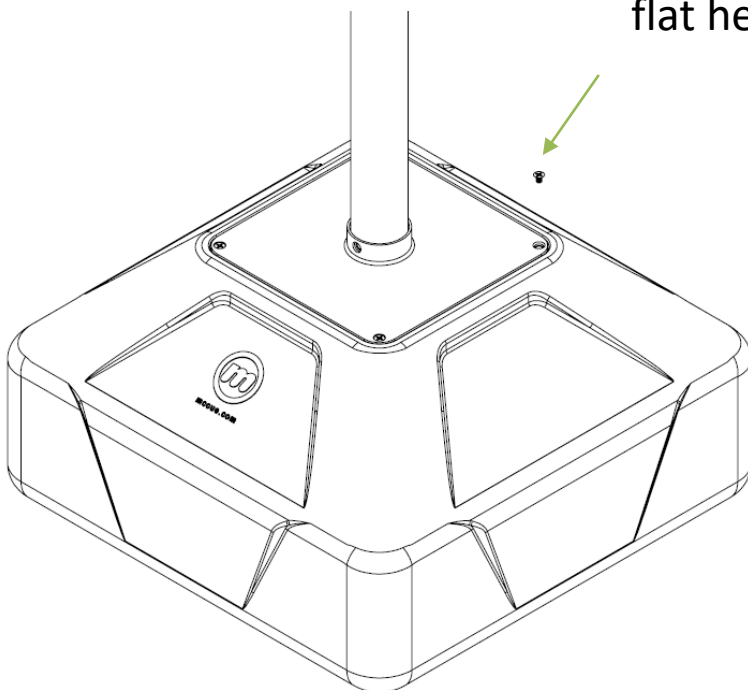

5


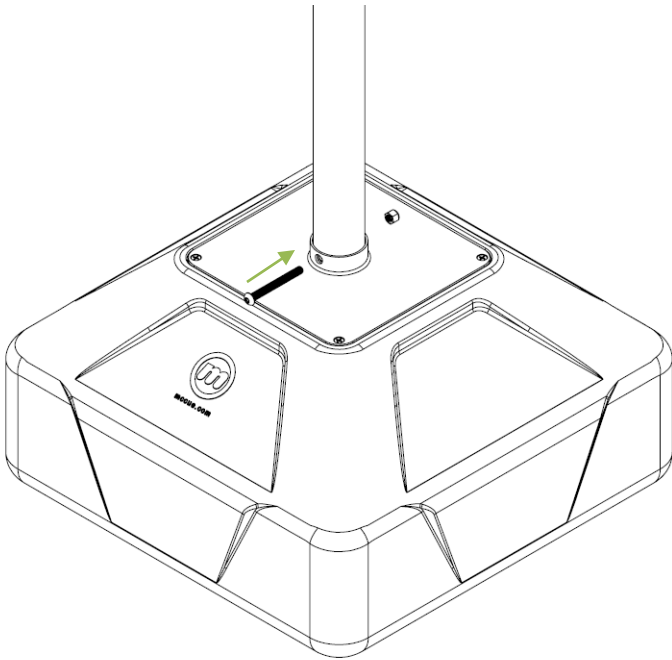


- Insert the 3/8" bolt through the cover and post and secure with a lock nut on the other side.


6

Install placards

Note : Placards not included

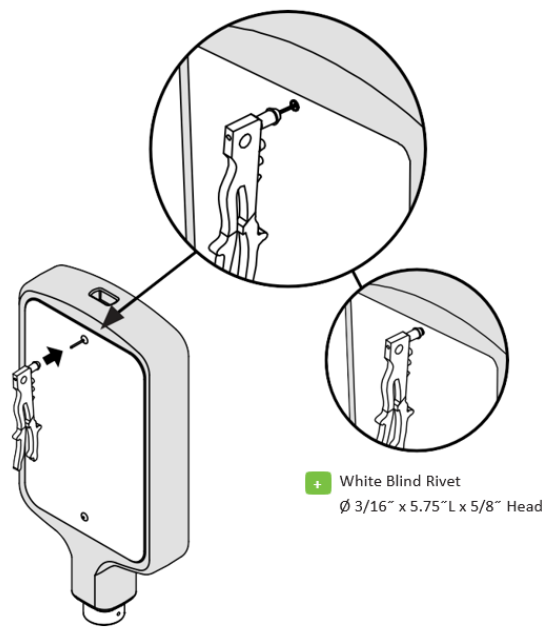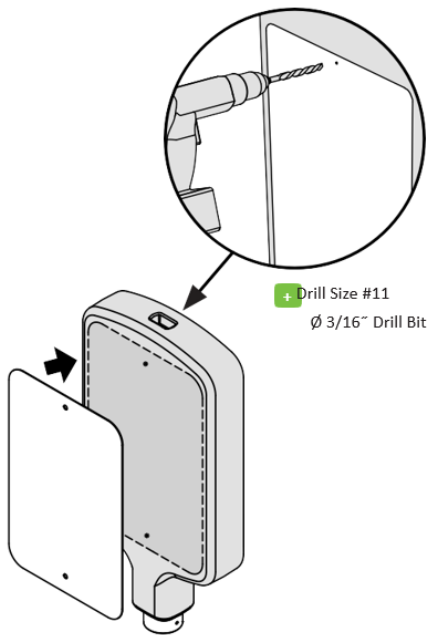

7

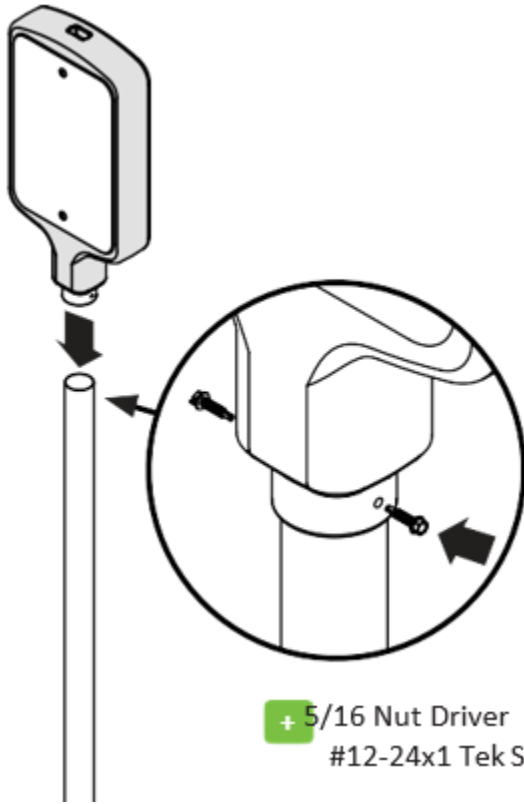

- Slide the Bumper sign topper over the post and secure using the 2 provided self drilling screws.

