



# BumperSign


## 2019 INSTALLATION INSTRUCTIONS

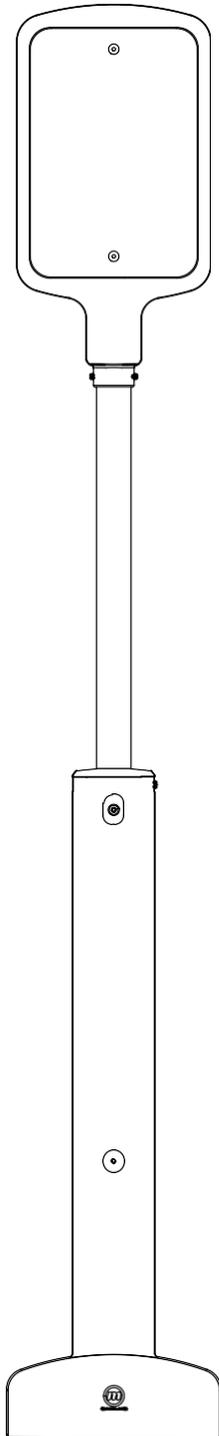

### Components

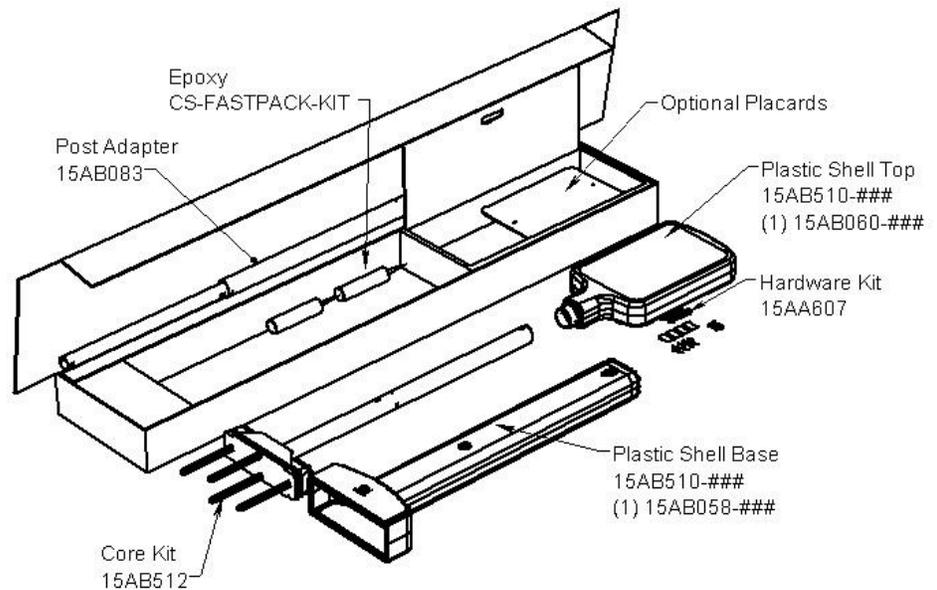

### Tools Required

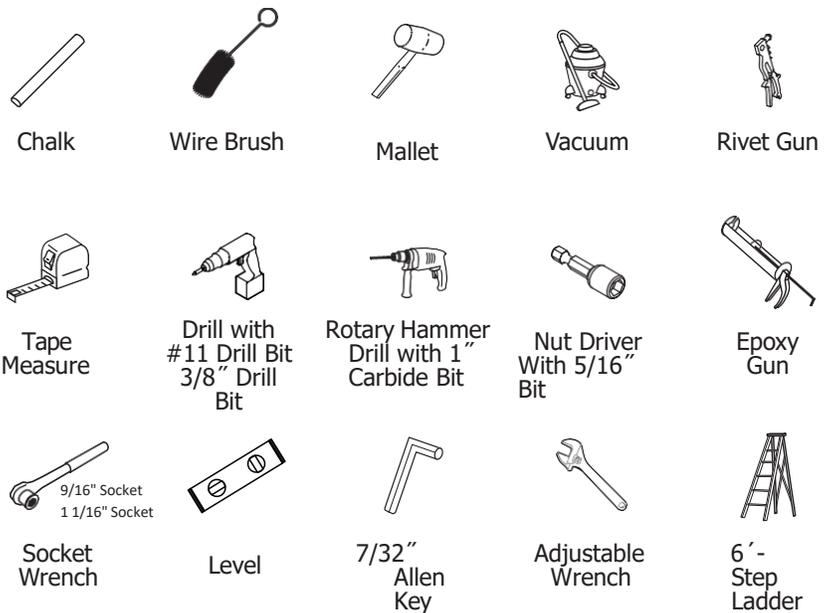

**McCue Corporation**  
Peabody, Massachusetts, USA  
+1 (800) 800 8503  
[customer-care@mccue.com](mailto:customer-care@mccue.com)

**McCue UK & Europe**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
[uksales@mccue.com](mailto:uksales@mccue.com)


**McCue Asia**  
迈客(厦门)有限公司  
Xiamen, Fujian, China  
+86-592-2200790

[mccue.com](http://mccue.com)






1

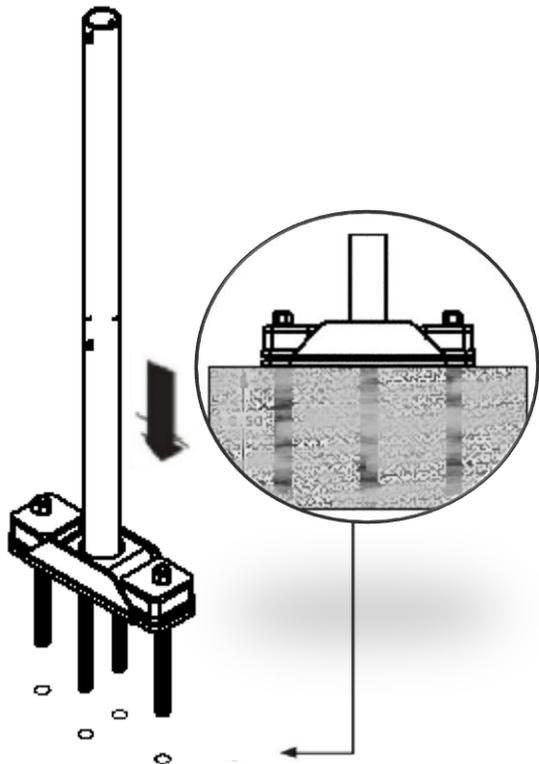

+ Position 7" away from any concrete or asphalt edges

2

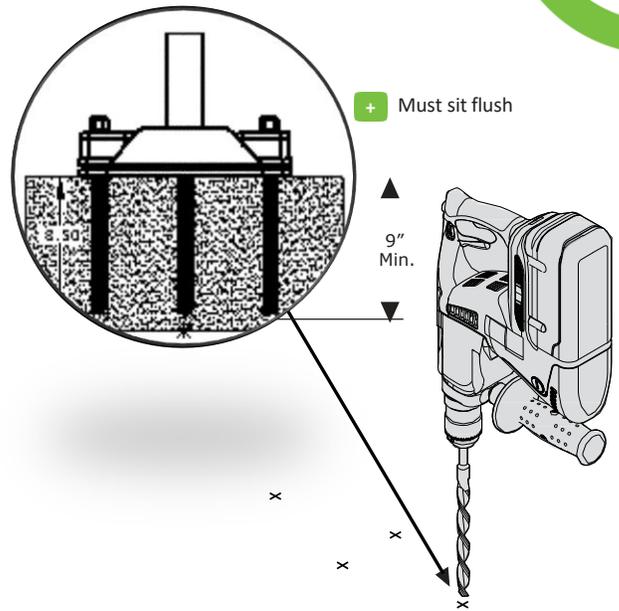


+ Must sit flush

9" Min.

Rotary Hammer Drill  
with 1" Carbide Bit


3

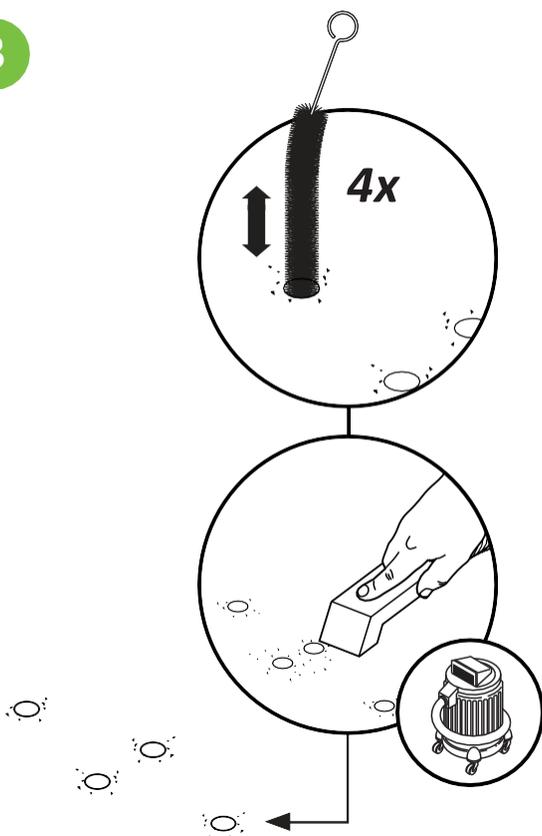

4



**Attention:**  
This is a time sensitive step

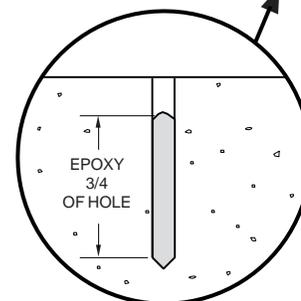



+ Average one cartridge of epoxy per two holes







5

+ Must sit flush to ground, use mallet

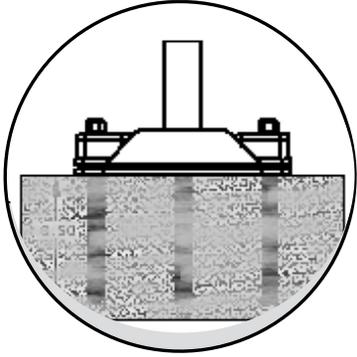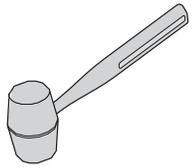



6

+ Clean away excess epoxy. Follow epoxy instructions for recommended cure times.

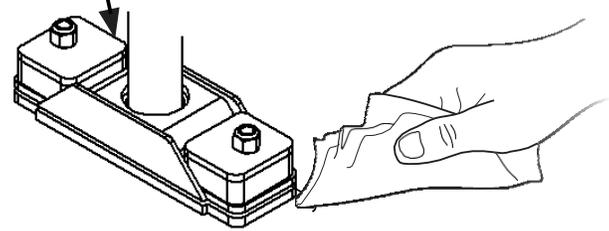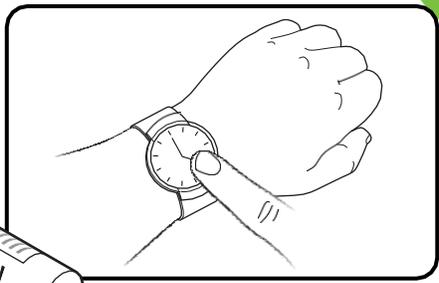



7

+ Level in all directions

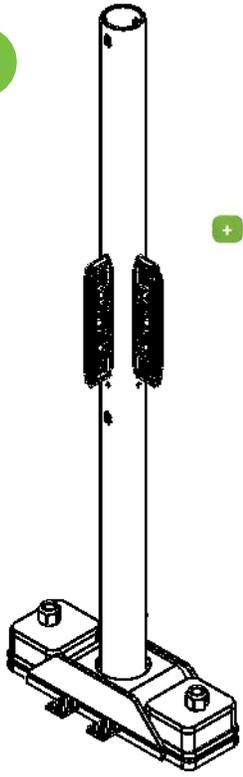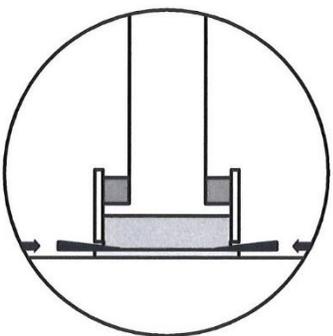


8

+ Adjustable Wrench

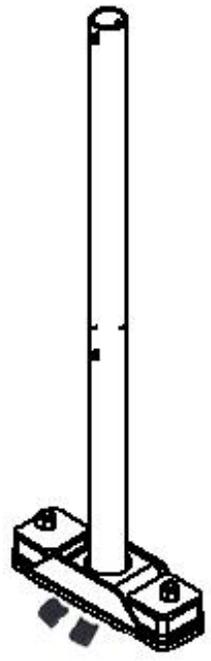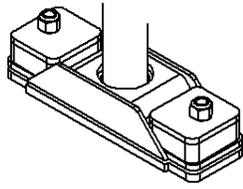





9

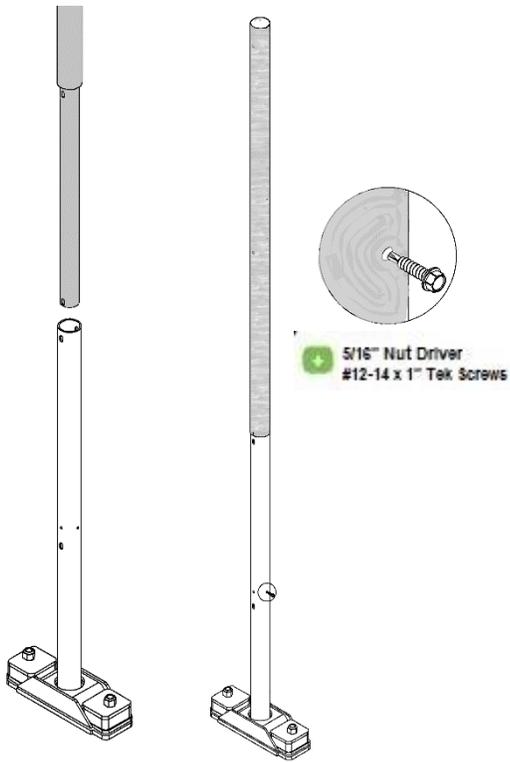


10

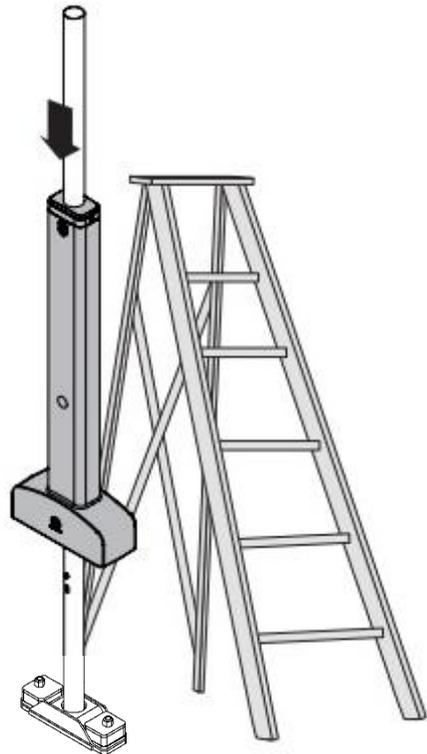

11

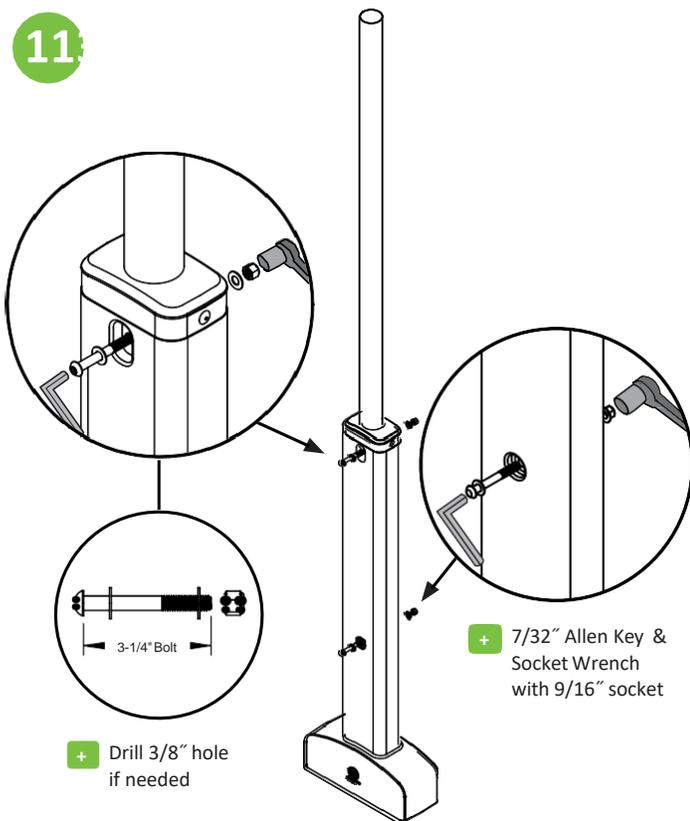


12

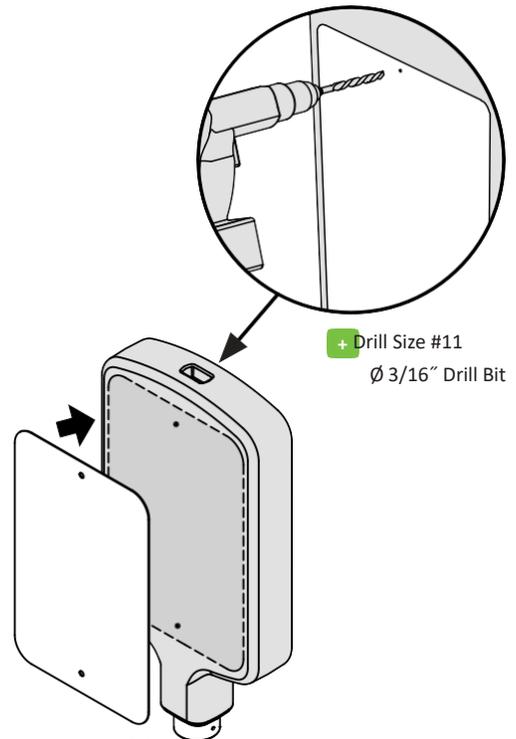



13

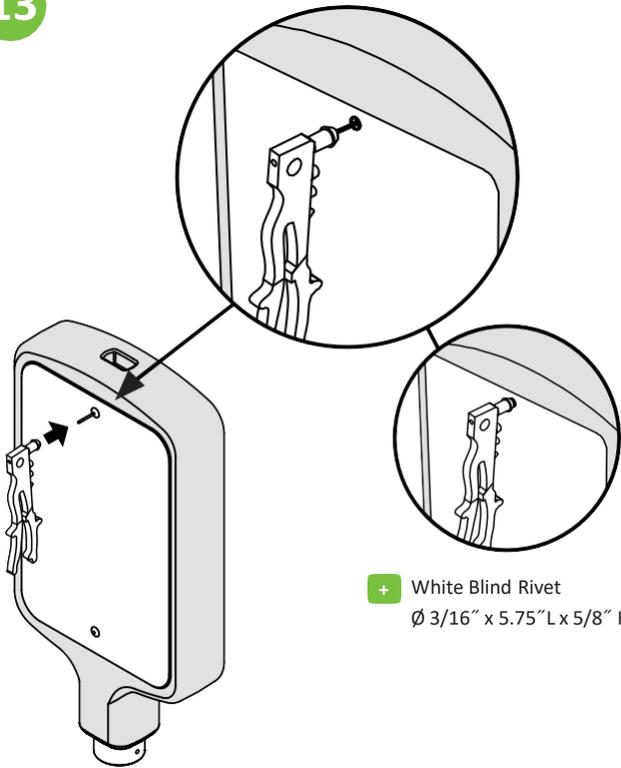


+ White Blind Rivet  
Ø 3/16" x 5.75" L x 5/8" Head

14



**Attention:**  
Make sure the  
sign front and  
lower shell is  
aligned

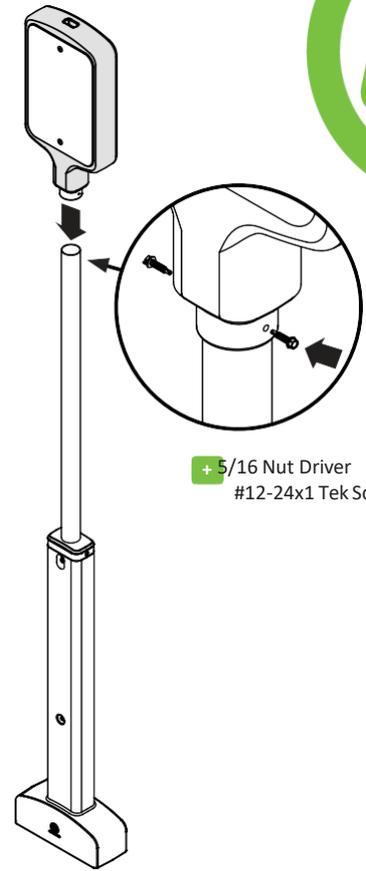

+ 5/16 Nut Driver  
#12-24x1 Tek Screw

