



BumperSign

2024 INSTALLATION INSTRUCTIONS

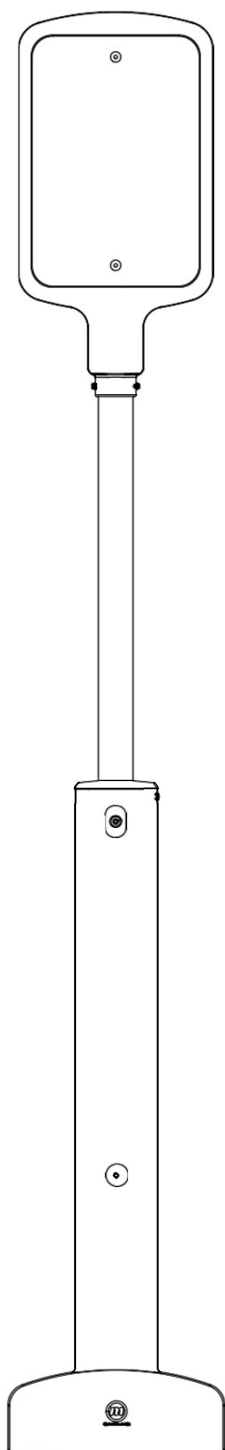

Components

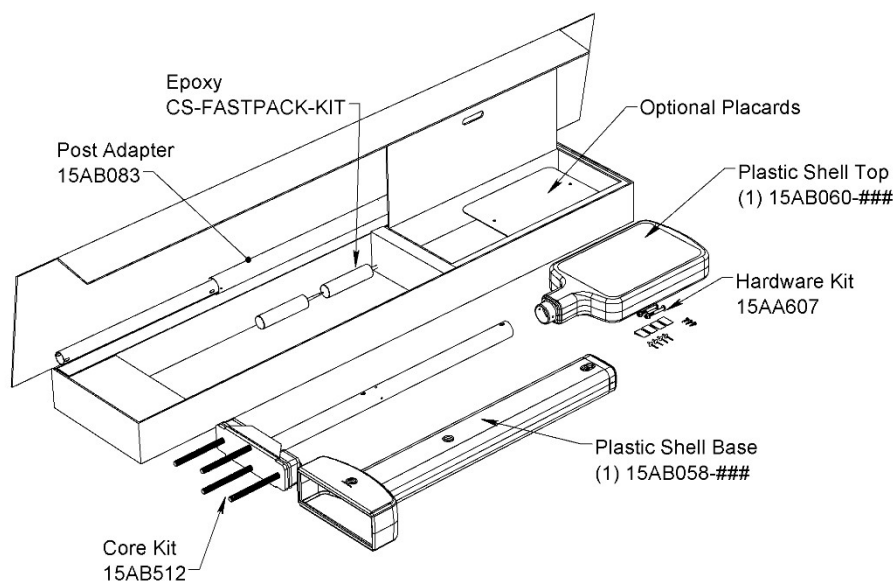

Tools Required



Chalk



Wire Brush



Mallet



Vacuum



Rivet Gun



Tape Measure



Drill with
#11 Drill Bit
3/8" Drill Bit



Rotary Hammer
Drill with 1" Carbide Bit




Nut Driver
With 5/16" Bit



Epoxy Gun



Socket Wrench
With 9/16" and
1-1/16" Sockets



Level



7/32" Allen Key



Adjustable Wrench



6' -Step Ladder



Questions

McCue Corporation
Peabody, Massachusetts, USA
+1 (800) 800 8503
customer care@mccue.com

McCue UK & Europe
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com


McCue Asia
迈客(厦门)有限公司
Xiamen, Fujian, China
+86-592-2200790

mccue.com






1

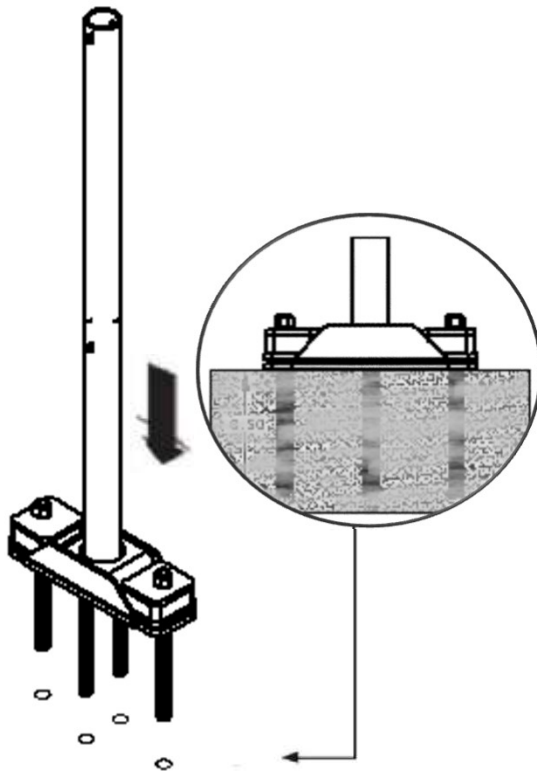


+ Position 7" away from any concrete or asphalt edges

2

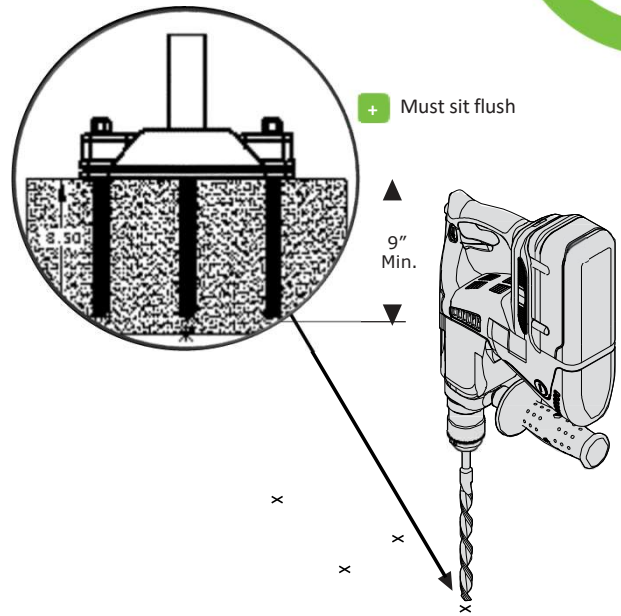

Rotary Hammer Drill
with 1" Carbide Bit


3

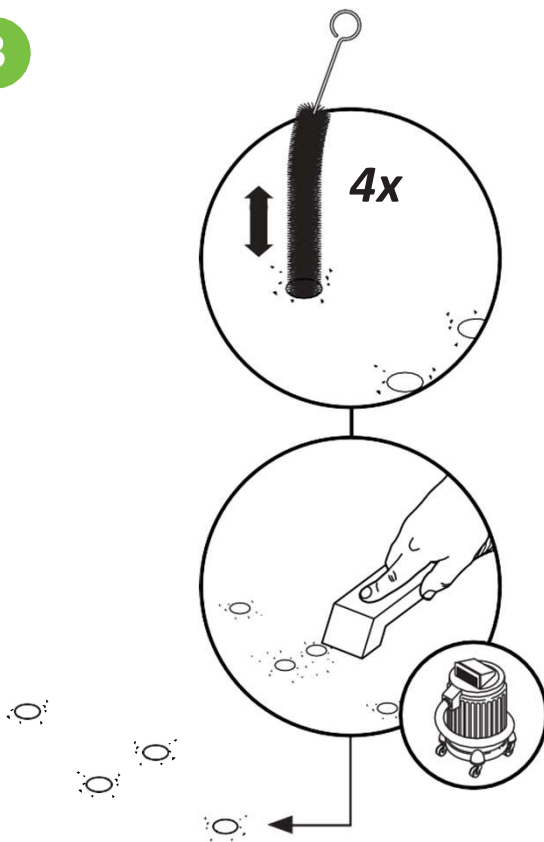


4



Attention:
This is a time
sensitive step

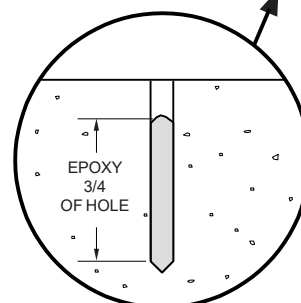


+ Average one cartridge of
epoxy per two holes






5

+ Must sit flush to ground, use mallet

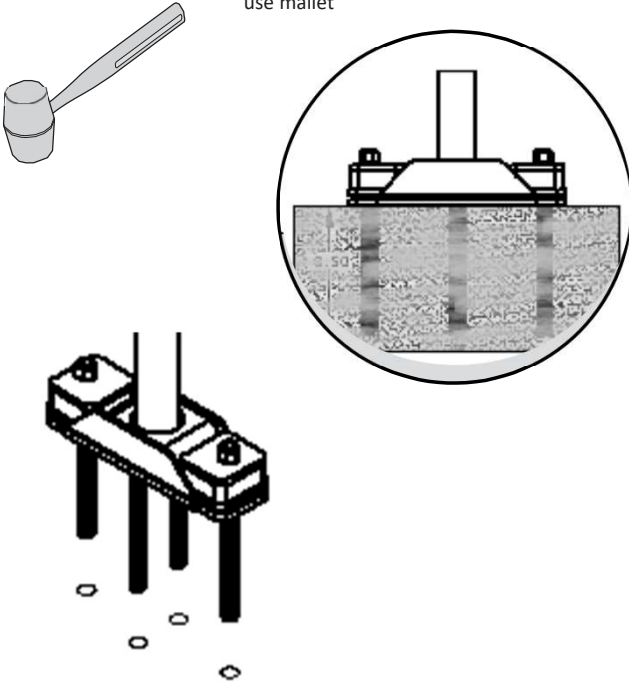


6

+ Clean away excess epoxy. Follow epoxy instructions for recommended cure times.

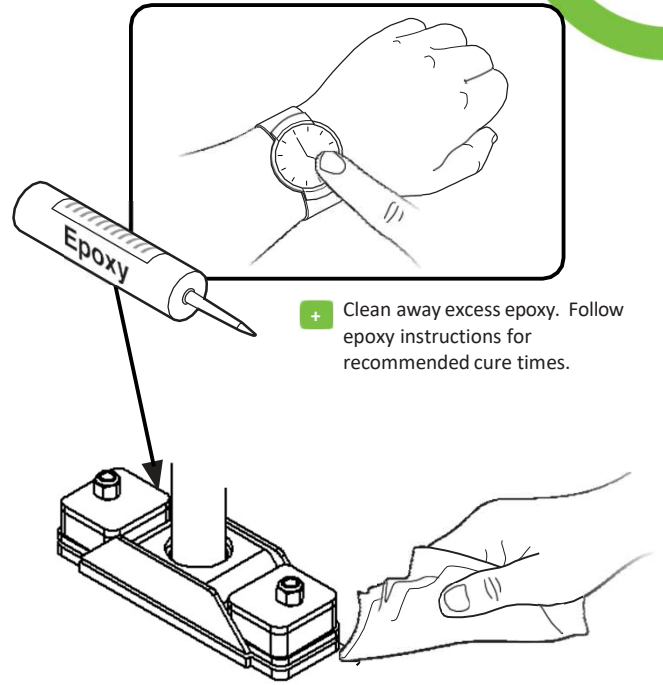


7

+ Level in all directions

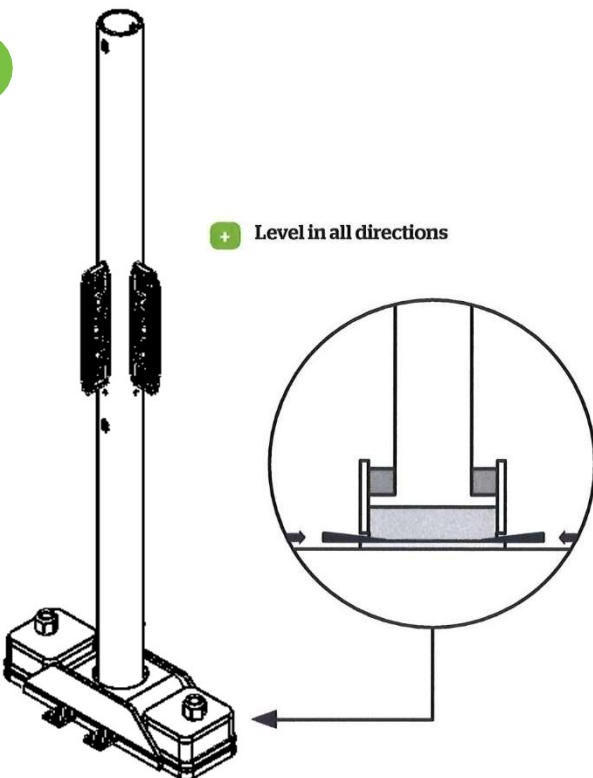


8

+ Adjustable Wrench

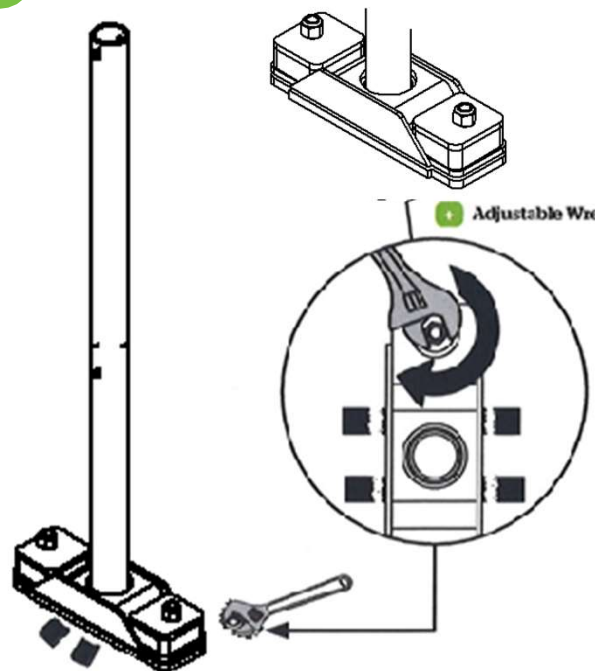





9

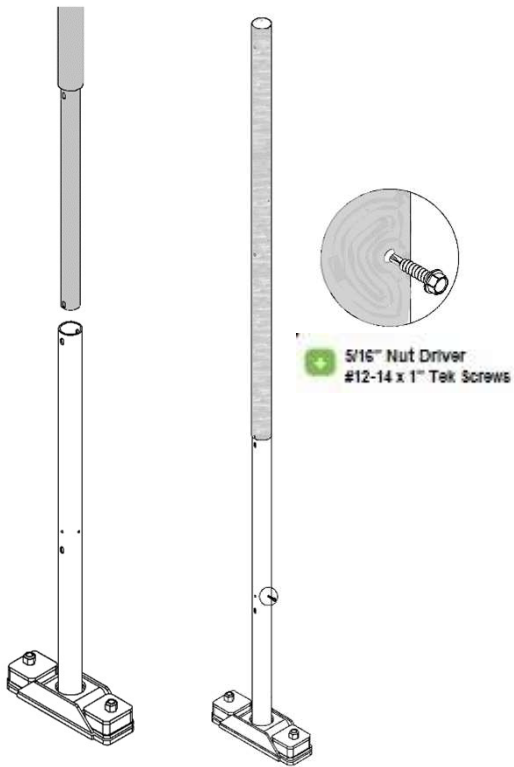


10

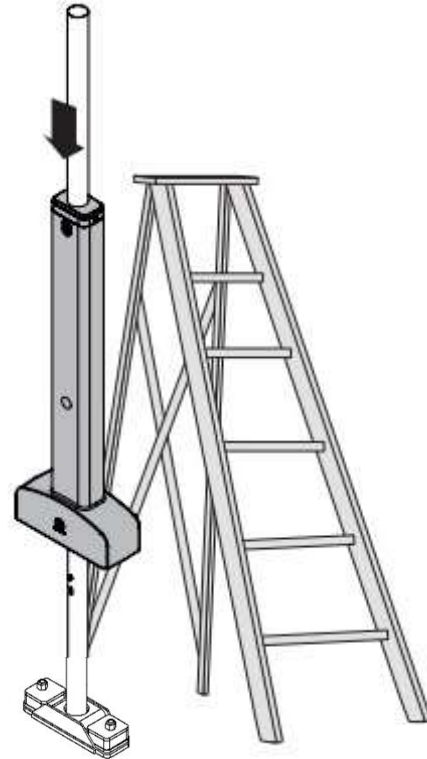

11

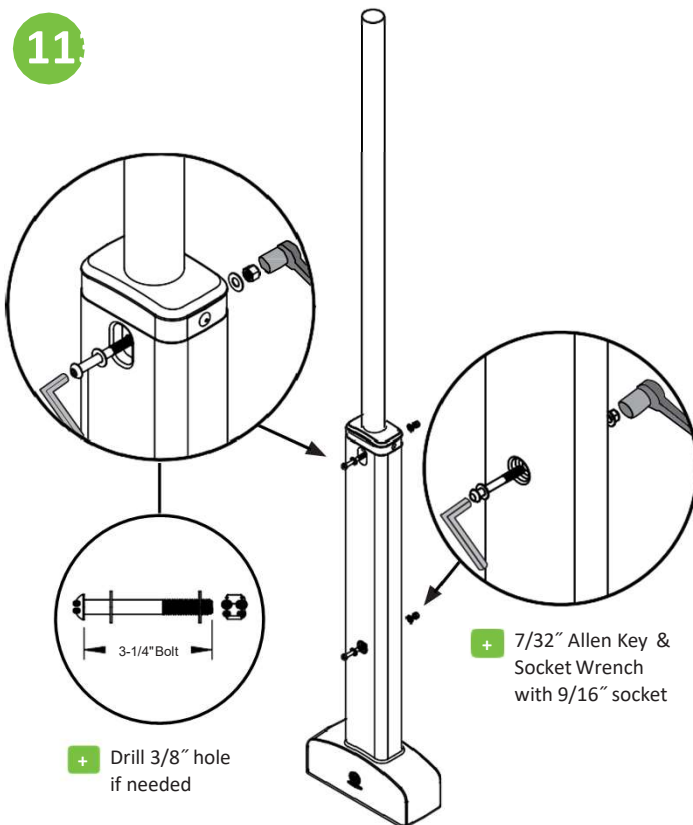


12

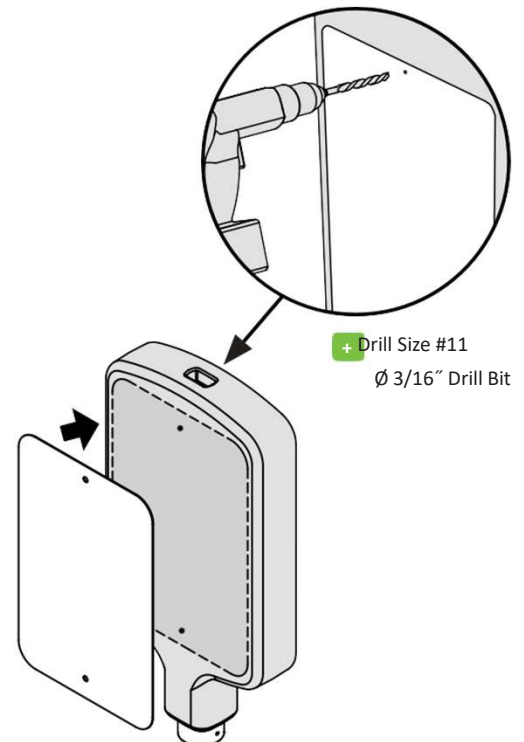



13

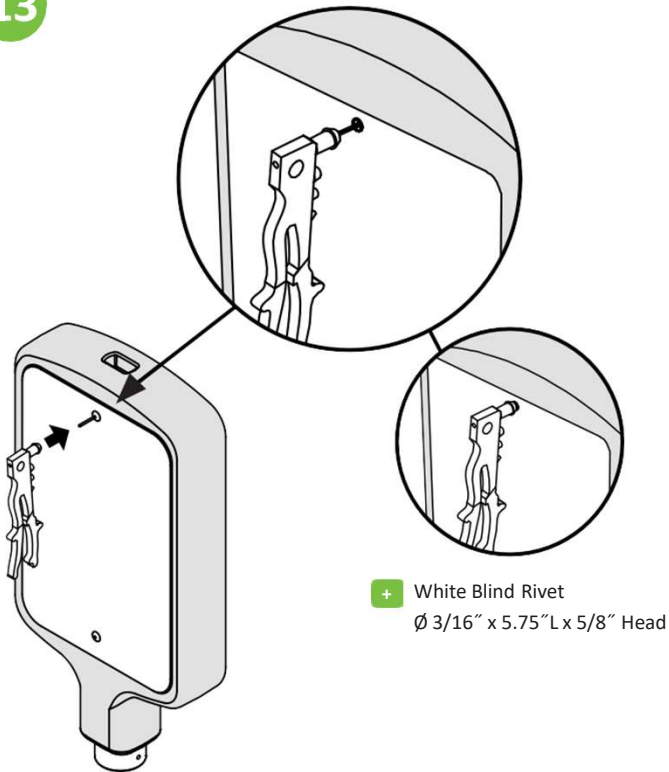

14



Attention:
Make sure the
sign front and
lower shell is
aligned

