


Pedestrian Barrier

INSTALLATION INSTRUCTIONS



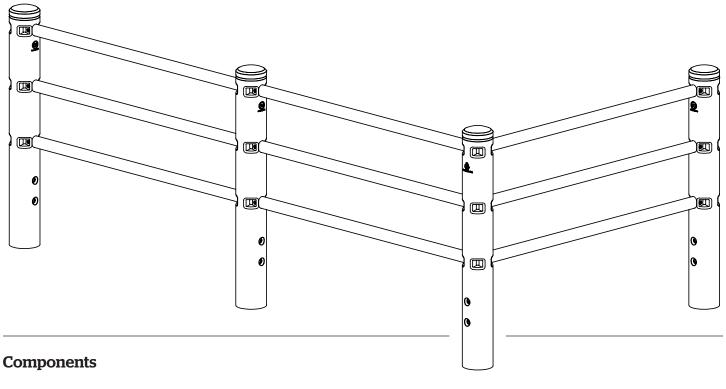

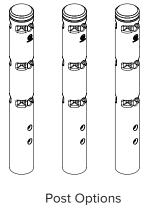







Core Kit

Rails

Concrete Anchor

Tools Required



















16mm (5/8 in)

24mm (15/16in)



McCue Corporation Peabody, Massachusetts, USA +1 (800) 800 8503

Milton Keynes, United Kingdom +44 (0)1908 365 511 uksales@mccue.com

McCue Asia 迈客(厦门)有限公司 Xiamen, Fujian, China +86-592-2200790 mccue.com



