


# Post Cover


## INSTALLATION INSTRUCTIONS



### Components (varies by installation)

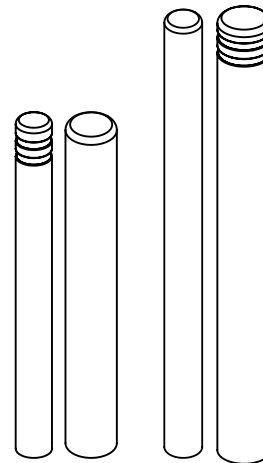

Post Cover With Or Without Reflective Tape  
4", 6" or 8" Diameter | 54' or 72' Height

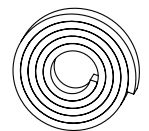

Foam Tape  
3M vinyl form acrylic adhesive one side tape ¼"- ½" thick


### Tools Required




Pencil



Sandpaper

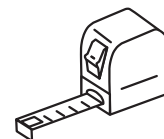

Tape Measure

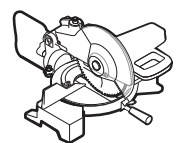

Saw & Blade Compound

*\* Shown with reflective tape. Standard and Reflective options available at 54" & 72" for exterior use only.*



**McCue Corporation**  
Peabody, Massachusetts, USA  
+1 (800) 800 8503  
customer care@mccue.com

**McCue UK & Europe**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
uksales@mccue.com

**McCue Asia**  
迈客(厦门)有限公司  
Xiamen, Fujian, China  
+86-592-2200790

[mccue.com](http://mccue.com)






1



**Attention:**  
Remove  
preexisting  
tape and apply  
provided tape

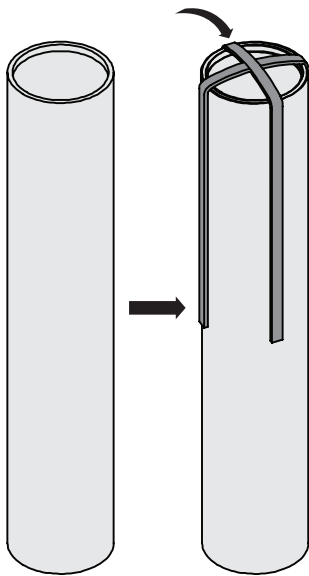


+ Overlap and center foam tape  
over core drilled bollard, reaching  
half way point on bollard



2



## Optional Step: Custom Cut Post Cover

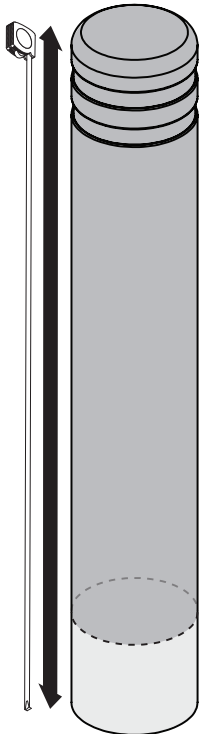

+ Use sand paper to  
smooth cut surface

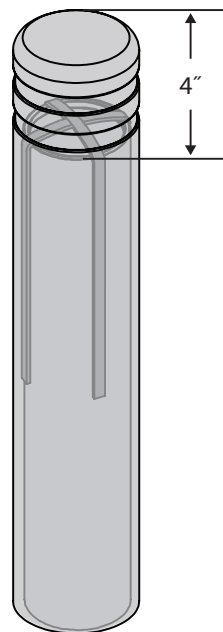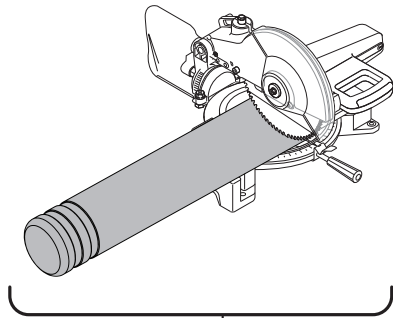

**Attention:**  
Leave max 4" of  
additional space  
when cutting the  
post cover