


CartPark Covered Peaked 2-Barrier Installation Instructions

Bill of Materials

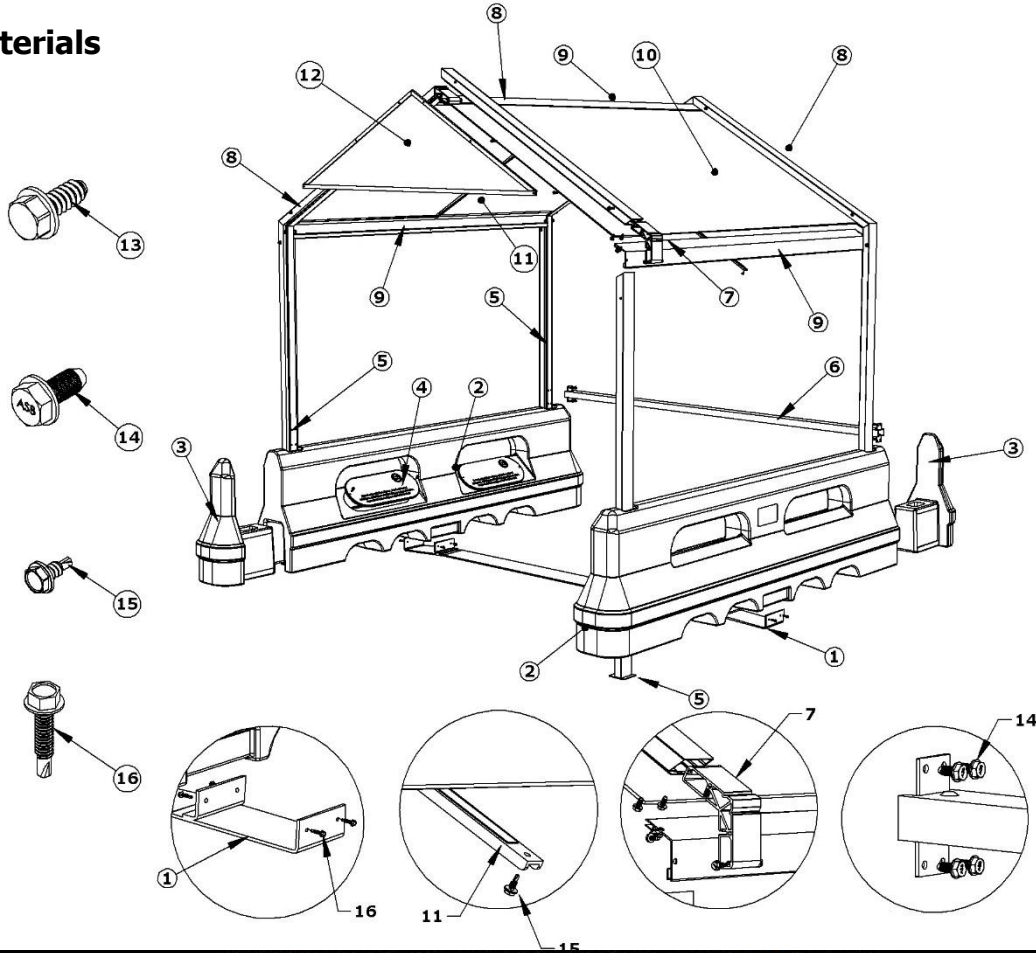


| CARTPARKCOVERED PEAKED 2 BARRIERS (SSC2B-###) 2018 | | | |
|--|------|--|--------------------------|
| ITEM NO. | QTY. | DESCRIPTION | MCCUEPART #'S |
| 1 | 1 | GROUND FRAME 1/4" THICK PLATE | CPC-C-GF |
| 2 | 2 | FEMALE PLASTIC ROTO-MOLDED BARRIERS | CBPC-BARRIER-B-### |
| 3 | 2 | MALE END CAPS | CBPC-ENDCAP-### |
| 4 | 4 | OBLONG PLASTIC CAP 20" X 6.0" WIDE | CBPC2-BARRIERFILLCAP-### |
| 5 | 4 | POST WITH WELDED FOOT PLATE, 72.75" LONG | CPC-C-POST-FAB |
| 6 | 1 | STOPBAR ASSEMBLY, 90.41" LONG, USE TYPE F SCREWS | CPC-C-STOPBAR-ASM |
| 7 | 6 | EXTRUSION CORNER BRACKET, 2.862" LONG | CPC-C-BRACK-FAB |
| 8 | 4 | TRUSS FRAME SUPPORT, 53.91" LOGN MITER BOTH SIDES | CPC-C-TRUSS-FAB |
| 9 | 3 | ROOF SUPPORT CHANNEL FABRICATION | SSC-R-SUPORT-CHNL |
| 10 | 2 | UV ROOF PANEL SHEET, 79.75" X 48" X 1/4" THICK | CPC-C-ROOFPANEL |
| 11 | 2 | ROOF PANEL STIFFENER SUPPORT, 48"X3/4"X0.35" | CPC-C-R-STIFF-FAB |
| 12 | 2 | TRIGLASS PLASTIC PANEL ASSEMBLY, 62.78"X18.89X1/2" | CPC-C-TRIGLASS-ASM |
| HARDWARE | | | |
| 13 | 48 | S/S UNSLOTTED HEX HEAD 5/16-12X3/4 SCREWS "B" | CPC-2B-HARDWARE |
| 14 | 8 | S/S HEX HEAD 5/16-18X3/4 SELF TAPPING "F" SCREWS | |
| 15 | 4 | S/S HEX HEAD #10X1/2 SELF DRILLING SCREWS | |
| 16 | 28 | S/S HEX HEAD #14X1.25 SELF DRILLING SCREWS | |

Two-Person Installation Recommended

Tools Required:

- Leather work gloves
- (2) Six-foot step ladders
- Tape measure
- Cordless drill with torque setting & back-up batteries
- 5/16" hex head driver bit
- 3/8" hex head driver bit
- 1/2" hex head driver bit
- Brush & dust pan
- Utility knife
- Cloth cleaning rags
- Tin shears
- 600 lbs. of sand, pea stone or gravel for ballasting.

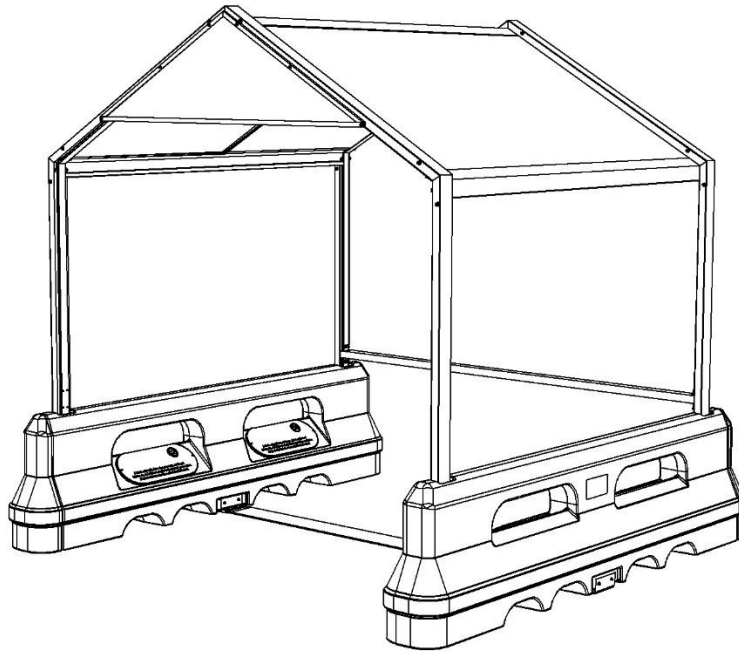

IMPORTANT: Assemble on a flat, level surface. All cart corrals should be inspected on a regular basis for damage. McCue recommends a minimum of two inspections per year in the spring and fall. Any damaged pieces, including ground frames and lane dividers which are not flat and flush with the ground, should be replaced with McCue replacement parts.


Step 1: Layout

On a flat surface, set the barriers, end caps and ground frame on the ground in the location where the cart corral will be used as shown.

Make sure that the filler holes on the barriers are facing inward.

Slide the interlocking end caps into the barriers.

Place the ground frame across the unit so that each end of the ground frame fits into the slots in the barriers.

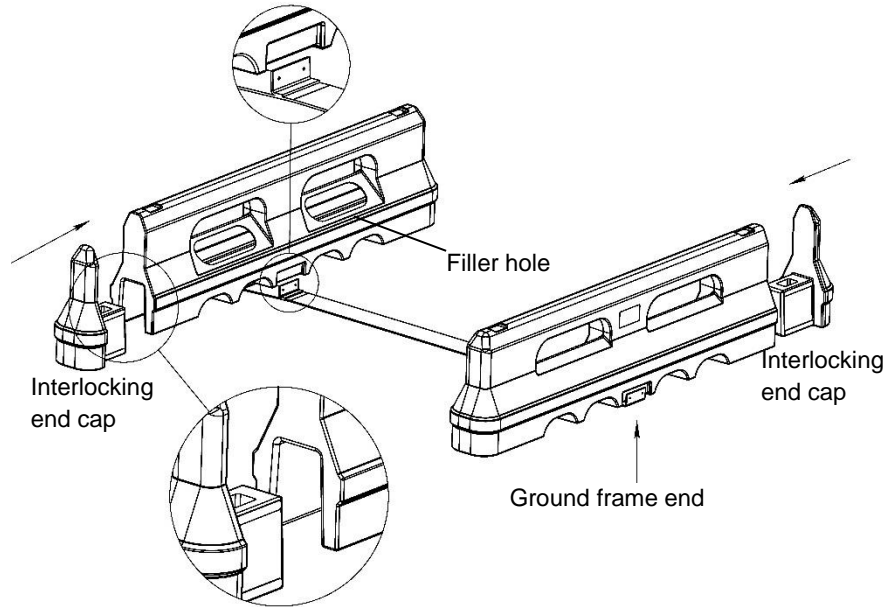


Step 2: Post Placement

Tip the barriers onto their sides. Insert the posts with welded footplates into the holes of the barriers and end caps.

Be sure that the angle cut on the posts (Figure A.) is facing the inside of the unit and that the footplates are positioned at the bottom of the barriers.

Be sure that the footplates are sitting flush with the bottom of the barriers (Figure B.) when barriers and posts are placed in the upright position.

Stand barriers and posts upright.

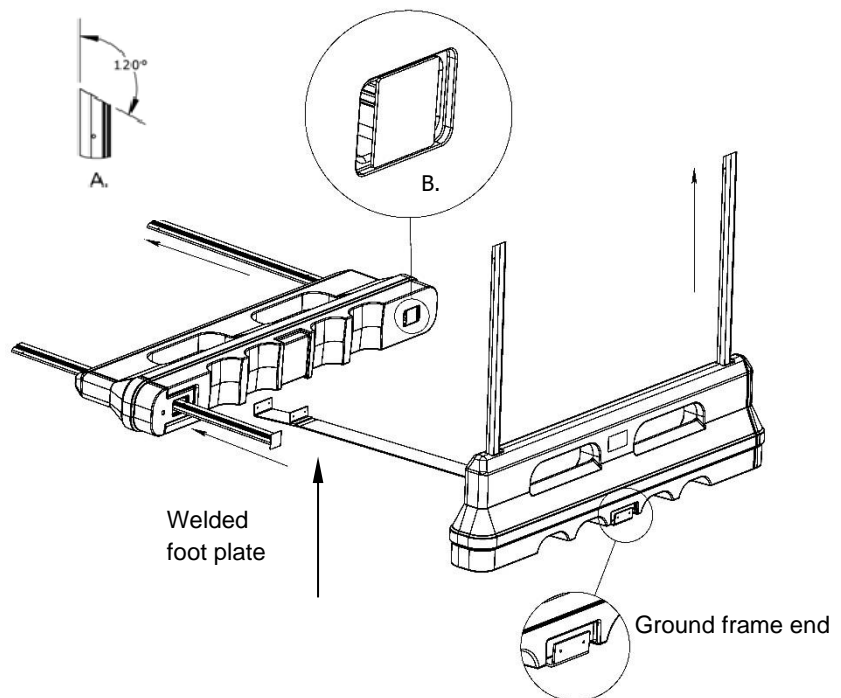


Step 3: Secure Ground Frame and Stop Bar

Slide the stop bar into the rear posts at the top of each barrier as shown.

Align the holes and secure the bar to each post with four (4) 5/16-18x3/4" self-tapping screws on each side.

Secure the ground frame to the barriers using eight (8) 14x1.25" self-drilling screws.

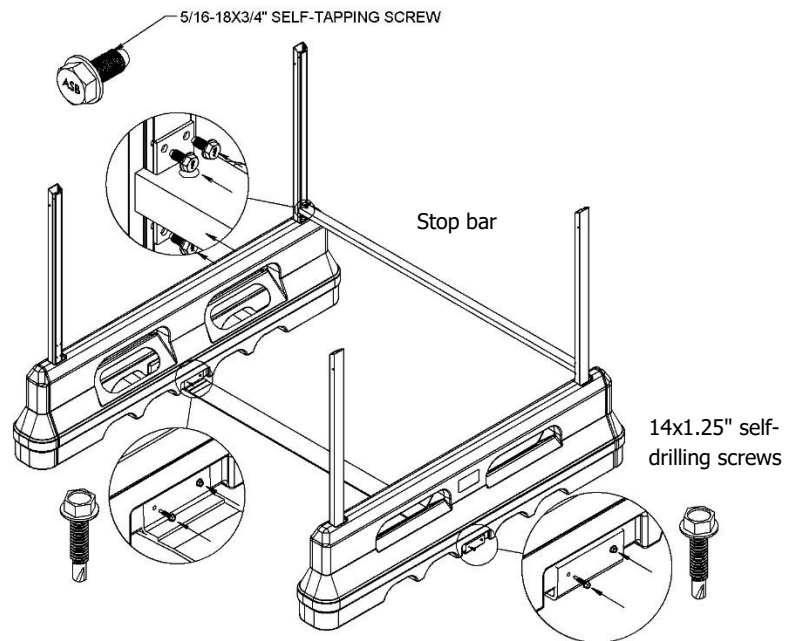

Step 4: Assembling and Securing the Truss


Assemble two (2) truss members with three (3) corner keys to form a triangle truss assembly in two (2) places as shown.

Note; this may be done on the ground and unit needs to be squared.

Slide each triangle truss assembly to the right and left uprights to form a hoop.

Secure each corner using four (4) 5/16-12x3/4" self-tapping screws until flush. Do not overtighten screws.

Make sure that the joints are flush at all corners.

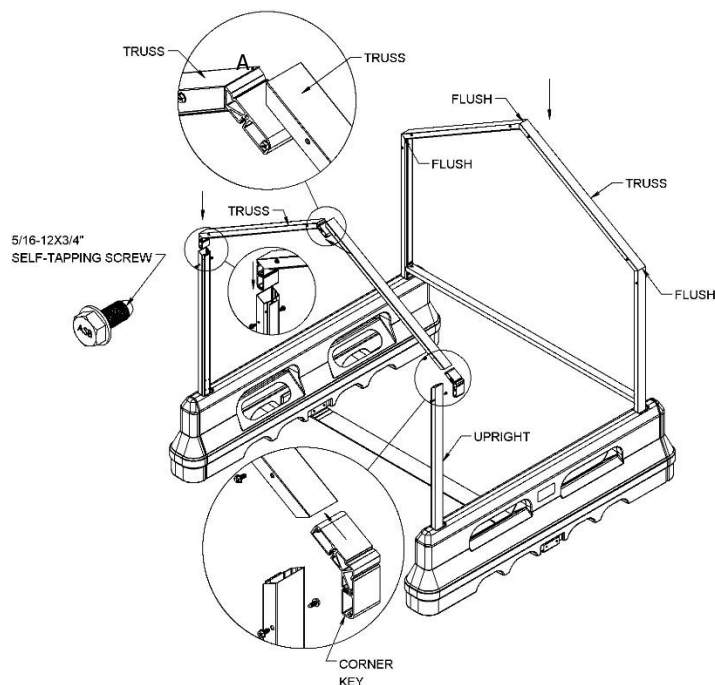


Step 5: Securing Top Roof Support Channel

Measure to make sure the unit is squared diagonally before continuing.

Slide the roof support channels in between each truss as shown. Align the predrilled holes on the roof supports with the truss assemblies. Secure the roof support channels with four (4) 5/16-12x3/4" hex head self-tapping screws.

Make sure that the roof supports sit flush with the inner angle of the trusses. Do not over-torque the screws.

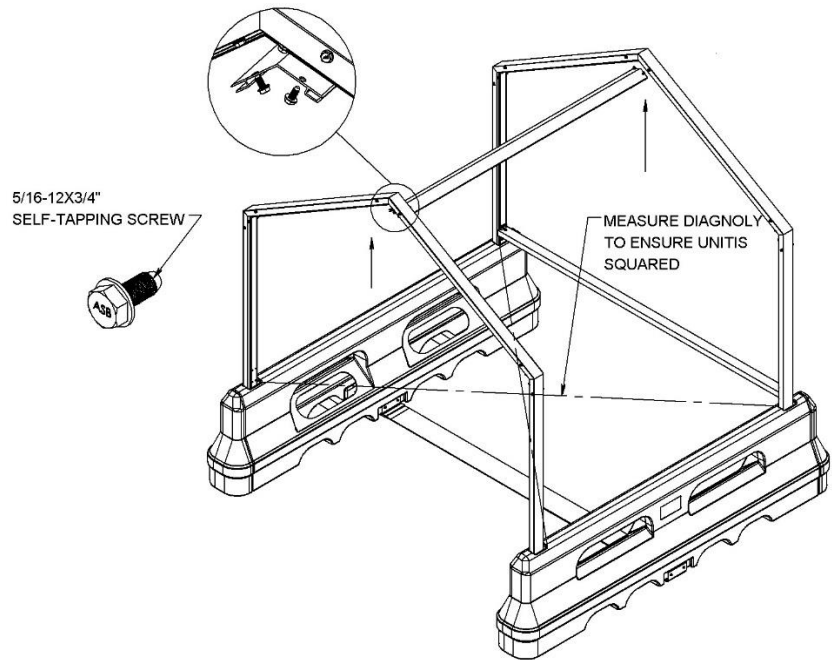


Step 6: Installing the Roof Panels

Each roof panel has a protective film that indicates the UV side. Position the panel so the UV side is facing up. Remove the protective film.

From inside the unit, with two people holding a roof panel, slide one side of the roof panel into the groove of one side of the truss (Figure A). Note: It is easiest to start at the top corner. Then flex the middle of the panel slightly to align and insert it into the other side of the truss. Slowly guide the roof panel into place.

Once situated in both sides of the trusses, slide the top portion of the roof panel into the recessed area of the roof support channel (Figure B).

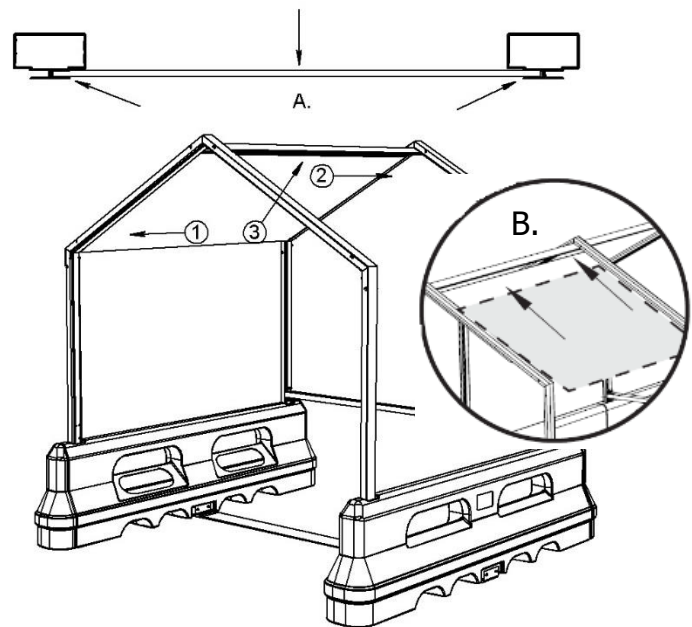


Step 7: Installing the Side Roof Support Channels

Measure between the posts to ensure that each side measures 78.25" at the center.

From the inside of the unit, slide the roof support channel between the trusses and into the bottom edge of the roof panel as shown.

Make sure that the roof support channel sits flush with the trusses and that all predrilled holes line up.

Secure the roof support channel with four (4) 5/16-12x3/4" hex head self-tapping screws. Repeat this step the other roof panels.

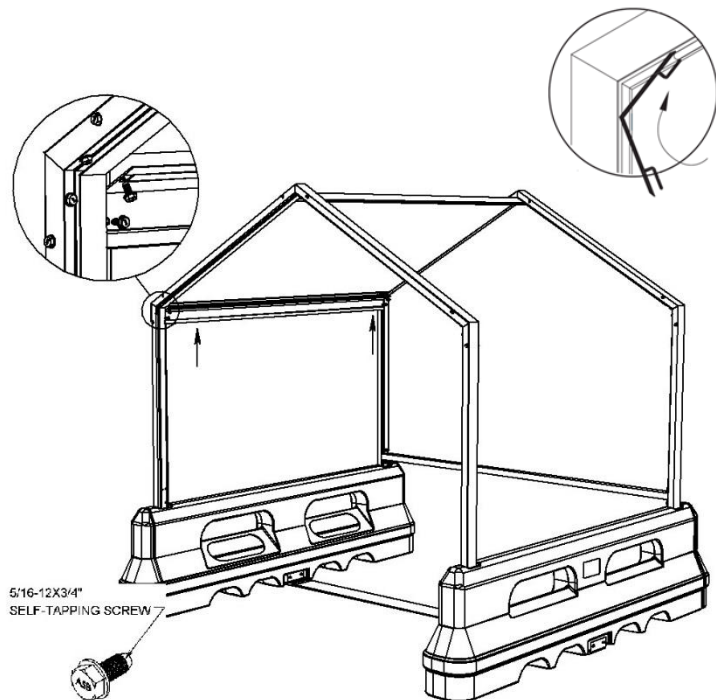


Step 8: Installing Stiffeners

Make sure the roof panels are clean and dry prior to installing the stiffening bars.

Peel off the protective paper from the double-sided tape on a roof panel stiffener. Align the holes in the roof panel stiffener with those on the top and lower roof support channels. Secure the stiffener with two (2) 10x1/2" hex head screws.

Once secure, press the roof panel into the roof panel stiffeners to adhere.

Repeat on the other side.

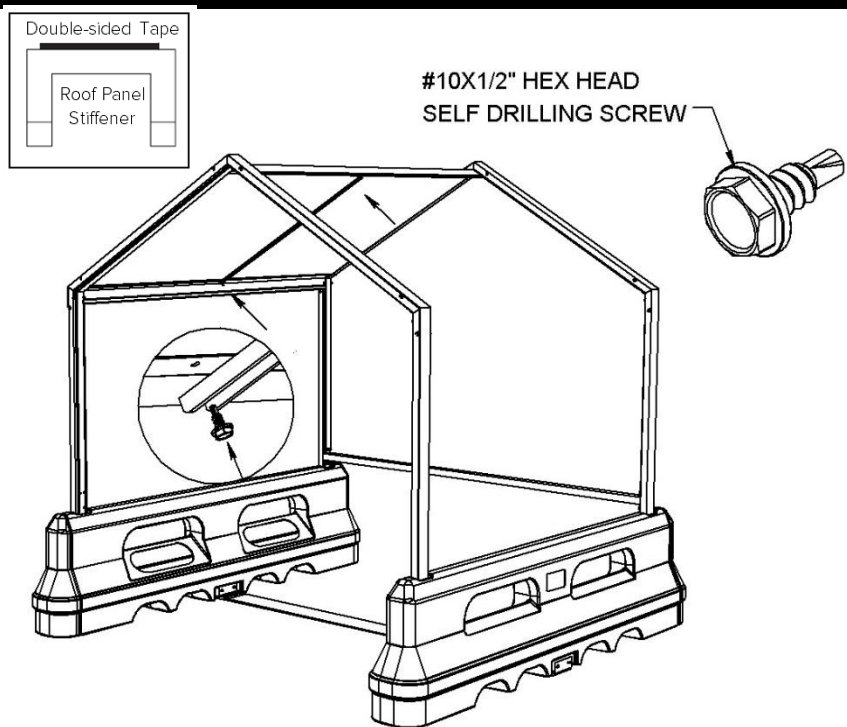


Step 9: Installing Triglass Panels

Peel off the protective film from the triglass panel Assembly. Locate on the front face of the unit.

With the triglass panel assembly aligned to truss and the bottom rail horizontal to ground.

Secure the triglass assembly into the truss with six (6) 14X1.25" self-drilling screws. Do not over-tighten screws.

Repeat this process at the other end of the unit.

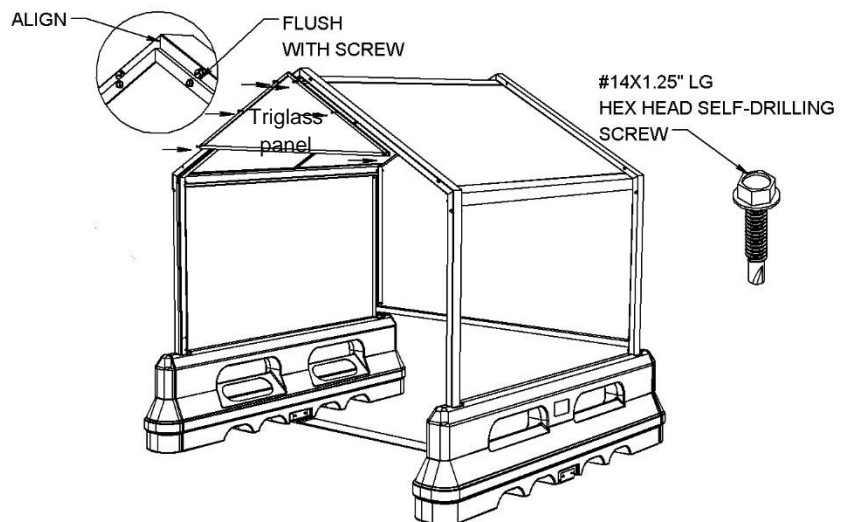


Step 10: Ballast with Pea Stone or Gravel

It is important to ballast the CartPark unit with sand, pea stone or gravel.

Fill each barrier with 300 lbs of sand, pea stone or gravel for a total weight of 600 lbs.

There are two filler holes in each barrier. Balance the weight in each barrier by pouring half of the sand, pea stone or gravel into one hole and the other half into the other hole.

Cover each hole with a barrier cap and secure barrier caps into place using two (2) 14x1.25" self-drilling screws per cap.

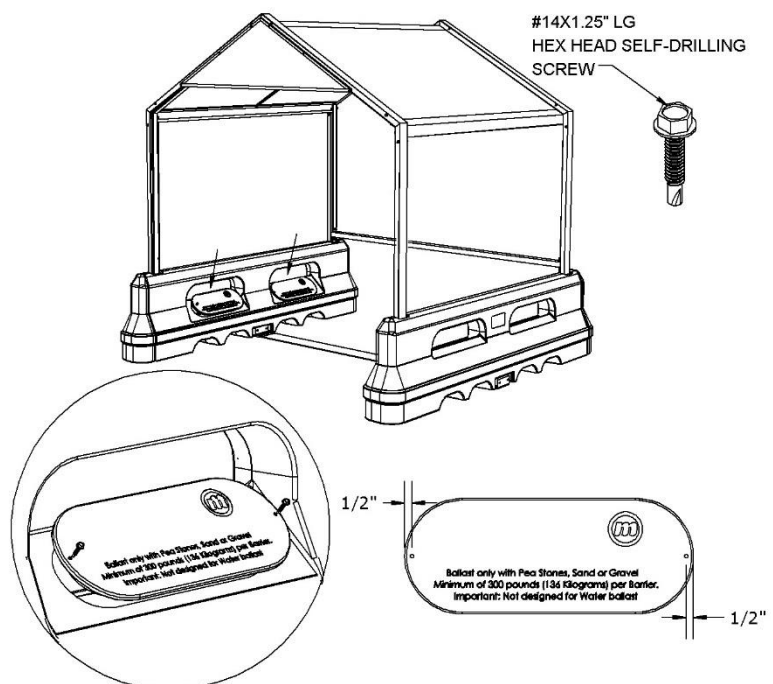

Step 11: Installation is Complete

